

S1C33 C Compiler Package Manual errata

ITEM: Procedure to execute the c33 rpf command			
Object manuals	Document codes	Items	Pages
S5U1C33001C(Ver.3.3.0)	410561105	10.6.2 Loading a File	10-47
S5U1C33001C(Ver.4.0.0)	410561106	10.6.2 Loading a File	10-93
<p>(Error)</p> <p>The file command must be executed before the target or load command. The c33 rpf command must also be executed before the file command.</p> <p>The following shows the basic procedure to execute a series of operations from loading a file to debugging.</p> <p>(gdb) c33 rpf sample.par (Sets map information.) (gdb) file sample.elf (Loads debugging information.)</p>			
<p>(Correct)</p> <p>The file command must be executed before the target or load command. The c33 rpf command must also be executed before the target command.</p> <p>The following shows the basic procedure to execute a series of operations from loading a file to debugging.</p> <p>(gdb) file sample.elf (Loads debugging information.) (gdb) c33 rpf sample.par (Sets map information.)</p>			

Object manuals	Document codes	Items	Pages
S5U1C33001C(Ver.3.3.0)	410561105	file (load debugging information)	10-140
S5U1C33001C(Ver.3.3.0)	410561105	load (load program)	10-141
S5U1C33001C(Ver.3.3.0)	410561105	c33 rpf (set map information)	10-142
S5U1C33001C(Ver.3.3.0)	410561105	c33 td (display PC trace content)	10-152
S5U1C33001C(Ver.3.3.0)	410561105	c33 ts (search PC trace content)	10-153
S5U1C33001C(Ver.3.3.0)	410561105	c33 tf (save PC trace content)	10-154
S5U1C33001C(Ver.3.3.0)	410561105	target (connect target)	10-173
S5U1C33001C(Ver.4.0.0)	410561106	load (load program)	10-193
S5U1C33001C(Ver.4.0.0)	410561106	c33 rpf (set map information)	10-194
S5U1C33001C(Ver.4.0.0)	410561106	c33 td (display PC trace content)	10-204
S5U1C33001C(Ver.4.0.0)	410561106	c33 autotd (automatically display PC trace content)	10-205
S5U1C33001C(Ver.4.0.0)	410561106	c33 ts (search PC trace content)	10-207
S5U1C33001C(Ver.4.0.0)	410561106	c33 tf (save PC trace content)	10-208
S5U1C33001C(Ver.4.0.0)	410561106	c33 autotf (automatically save PC trace content)	10-210
S5U1C33001C(Ver.4.0.0)	410561106	target (connect target)	10-232
(Error)			
(gdb) c33 rpf sample.par (sets map information.)			
(gdb) file sample.elf (loads debugging information.)			
(Correct)			
(gdb) file sample.elf (loads debugging information.)			
(gdb) c33 rpf sample.par (sets map information.)			

Object manuals	Document codes	Items	Pages
S5U1C33001C(Ver.4.0.0)	410561106	c33 profile (launch profile window)	10-225
S5U1C33001C(Ver.4.0.0)	410561106	c33 coverage (launch coverage window)	10-226
(Error) (gdb) c33 rpf c33.par (gdb) file sample.elf			
(Correct) (gdb) file sample.elf (gdb) c33 rpf c33.par			

Object manuals	Document codes	Items	Pages
S5U1C33001C(Ver.3.3.0)	410561105	10.8 Parameter files	10-188
S5U1C33001C(Ver.4.0.0)	410561106	10.8 Parameter files	10-245
<p>(Error) Be sure to execute the c33 rpf command before the file, target, and load commands. The following shows the basic sequence of command execution: (gdb) c33 rpf sample.par (sets map information.) (gdb) file sample.elf (loads debugging information.)</p>			
<p>(Correct) Be sure to execute the c33 rpf command before the target and load commands. The following shows the basic sequence of command execution: (gdb) file sample.elf (loads debugging information.) (gdb) c33 rpf sample.par (sets map information.)</p>			