

S1C63 Manual errata

ITEM:			
Object manuals	Document codes	Items	Pages
S1C6F016 Technical Manual	411801400	C.2.3 Serial Programming Procedure	AP-C-3
S1C6F416 Technical Manual	404736203	A.2.3 Serial Programming Procedure	132
S1C6F632 Technical Manual	411707400	B.2.3 Serial programming procedure	226
S1C6F666 Technical Manual	410963501	A.2.3 Serial programming procedure	208
<p>(Error)</p> <p>(4) Installing the USB-Serial conversion driver (Required only when the USB-Serial On Board Writer is used)</p> <p>When the USB-Serial On Board Writer (S5U1C88000W4) is connected for the first time, a dialog box appears on the PC screen to prompt the user to install the driver. Install the USB-Serial conversion driver by following the prompts. The USB-Serial conversion driver was copied in the "¥EPSON¥S1C63¥writer¥driver" folder when the S1C63 Family Assembler Package 2 (S5U1C63000A2) was installed. Specify this folder as the driver location.</p>			
<p>(Correct)</p> <p>(4) Installing the USB-Serial conversion driver (Required only when the USB-Serial On Board Writer is used)</p> <p>When the USB-Serial On Board Writer (S5U1C88000W4) is connected for the first time, a dialog box appears on the PC screen to prompt the user to install the driver. Install the USB-Serial conversion driver by following the prompts. The USB-Serial conversion driver was copied in the "¥EPSON¥S1C63¥writer¥driver" and "¥EPSON¥S1C63¥writer¥driver1" folder when the S1C63 Family Assembler Package 2 (S5U1C63000A2) was installed. Specify as follows folder as the driver location.</p>			
Serial number of S5U1C88000W4100 (written on the back side of the board)		Location of the driver	
0Z04W73001-0Z04W84050		/EPSON/S1C63/writer/driver	
0Z04W87001 or later		/EPSON/S1C63/writer/driver1	

S1C6F666 Manual errata

ITEM: 9.5 Oscillation Characteristics			
Object manuals	Document codes	Items	Pages
S1C6F666	410963501	OSC3 CR oscillation circuit Table's comment	P198
<p>(Error)</p> <p>Unless otherwise specified</p> <p>VDD=3.0V,VSS=0V,Rcr=30k (2MHz),Ta=-20 to 70</p>			
<p>(Correct)</p> <p>Unless otherwise specified</p> <p>VDD=3.0V,VSS=0V,Rcr=40k (2MHz),Ta=-20 to 70</p>			

S1C63666/6F666 Manual errata

ITEM:		
Object manuals	Document code	Object number
S1C63666 Technical Manual	404519503	Page 53
S1C6F666 Technical Manual	410963501	Page 81
<p>(Error)</p> <p>S1C63666 :</p> <p>Page 53, Table 4.8.3.2 Frame frequency</p> <p>When 1/5 duty is selected <u>40Hz</u></p> <p>S1C6F666 :</p> <p>Page 81, Table 5.9.3.2 Frame frequency</p> <p>1/5 duty <u>40Hz</u></p>		
<p>(Correct)</p> <p>S1C63666 :</p> <p>Page 53, Table 4.8.3.2 Frame frequency</p> <p>When 1/5 duty is selected <u>25.6Hz</u></p> <p>S1C6F666 :</p> <p>Page 81, Table 5.9.3.2 Frame frequency</p> <p>1/5 duty <u>25.6Hz</u></p>		